


# NOVA LUCE


9695126, 9695127

1

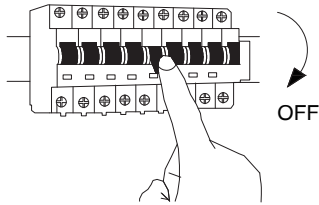


Turn off the general switch

2

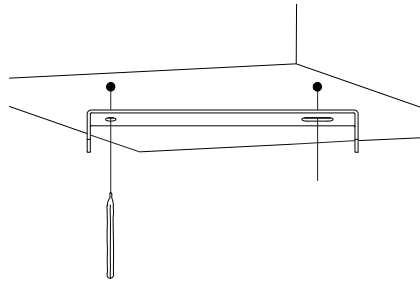


Mark holes

3

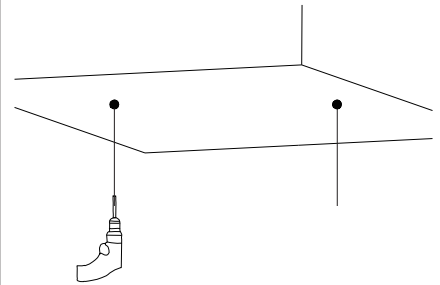


Drill holes

4

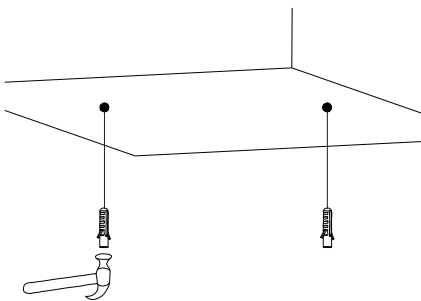


Apply plastic anchors

5

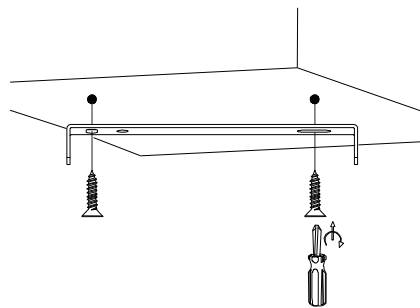


Tie up screws

6

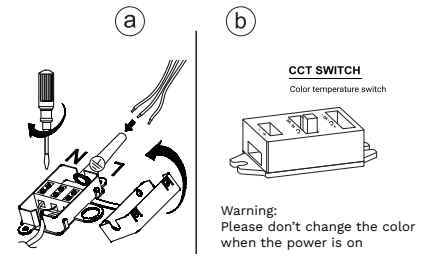


Connect wires

7

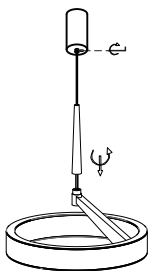


Adjust the high by tying the screw

8

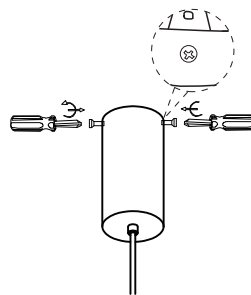

Tie up side screws  
to fix it in place

9

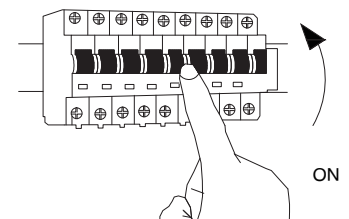

Turn on the general switch

