



NOVA LUCE

9533522/ 9533524
9533521/ 9533523

①

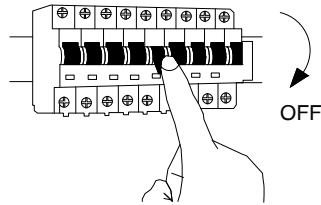


Turn off the general switch

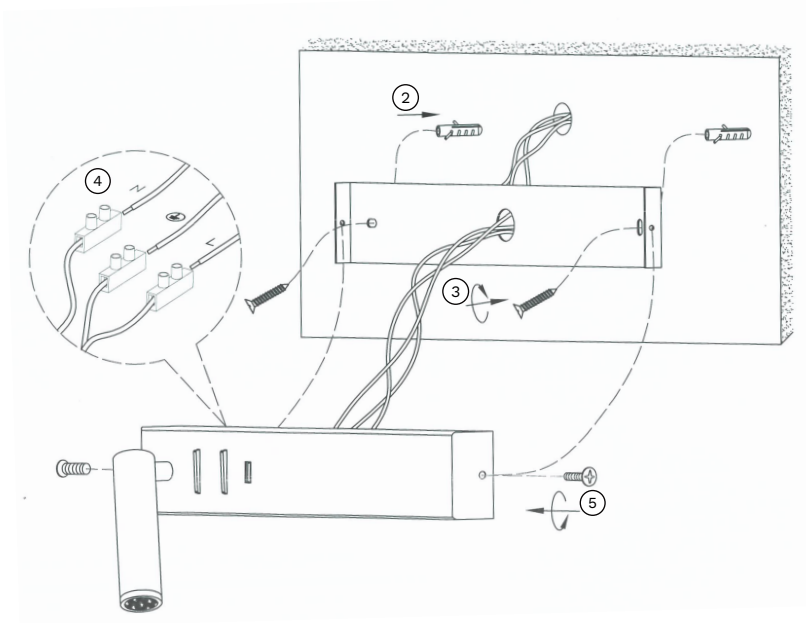

- 2. Drill holes & apply plastic anchors
- 3. Tie up screws
- 4. Connect the wires
- 5. Apply side screws by tying them up

⑥

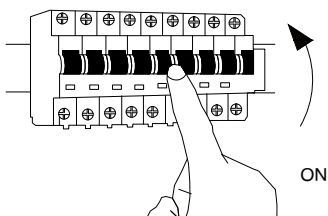

Turn on the general switch

⑦

