


NOVA LUCE


7201601

1

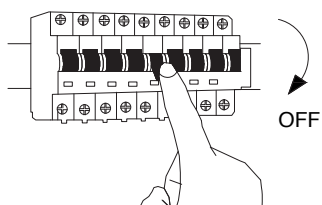


Turn off the general switch

2

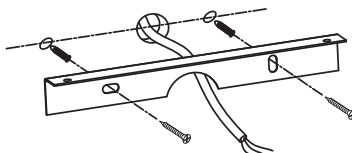


Drill holes & apply plastic anchors
With screws

3

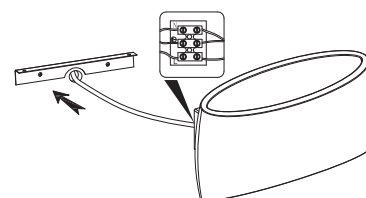


Connect the wires

4

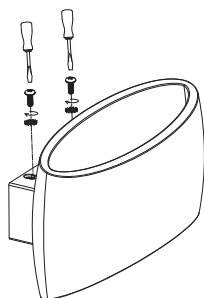


Apply the screws

5

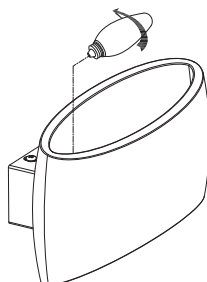

Apply the bulb in place

6

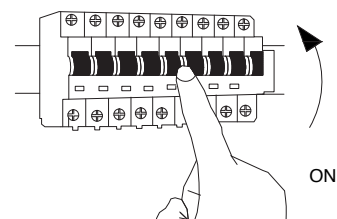

Turn on the general switch

