

NOVA LUCE


9511015

1



Turn off the general switch

2

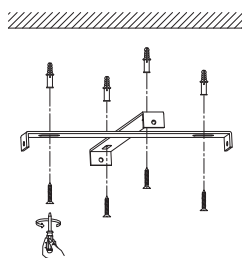


Drill holes & apply plastic anchors
With screws

3




Connect the wires

4

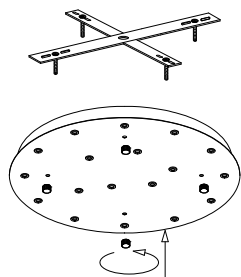


Apply the canopy in place
& Apply the caps

5

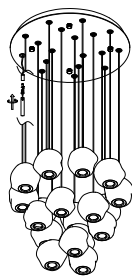

By rotating apply the wires

6

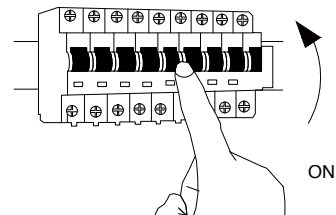

Turn on the general switch

