


NOVA LUCE


9006034

1

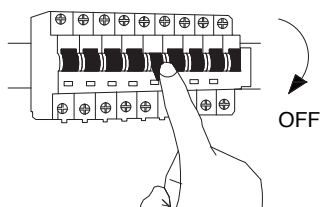


Turn off the general switch

2

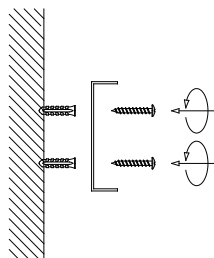


Align, mark and drill holes
to apply the screws

3

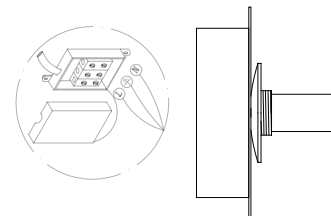


Connect the wires

4

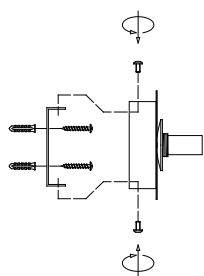


Apply the side screws

5

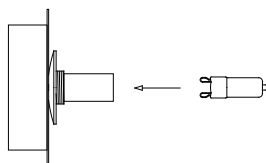


Insert the light bulb

6

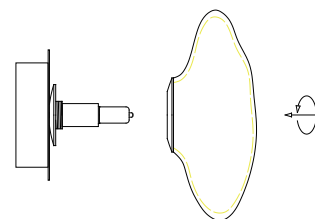

By rotating apply the glass

7

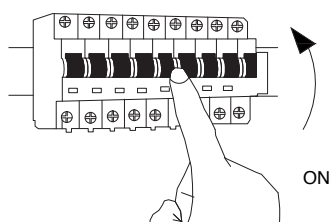

Turn on the general switch

