




# NOVA LUCE

9030121 9030122


3X  3X 

1

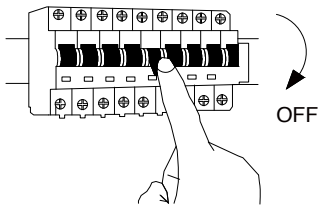


Turn off the general switch

2

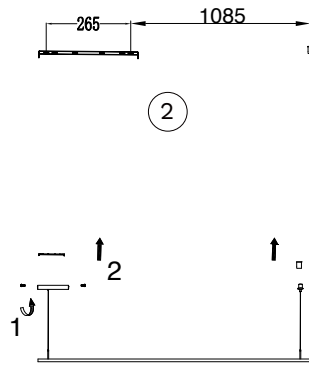


Mark the areas

3

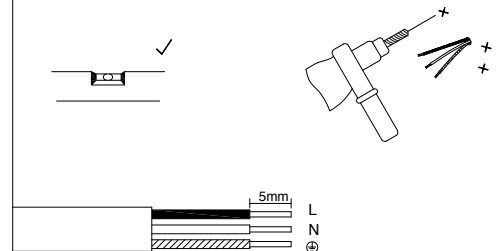


Connect the wires

4

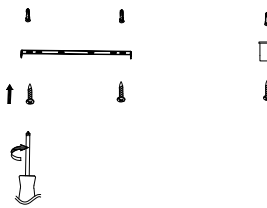


Drill holes apply plastic anchors  
With screws

5

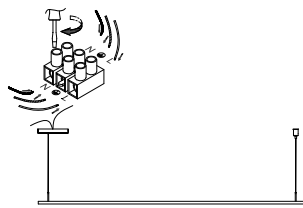


Connect the wires

5

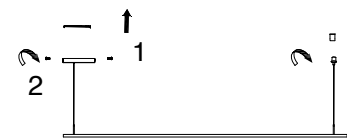

Put it in place

5

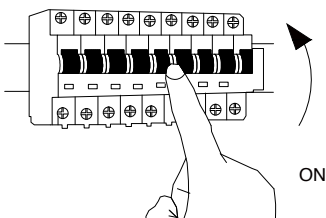

Turn on the general switch



[www.novaluce.com](http://www.novaluce.com)