



# NOVA LUCE


9001094

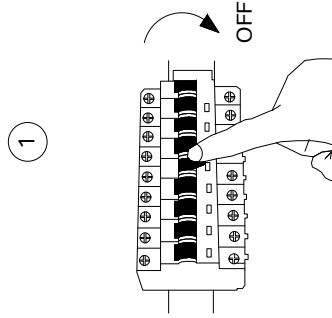


Turn off the general switch

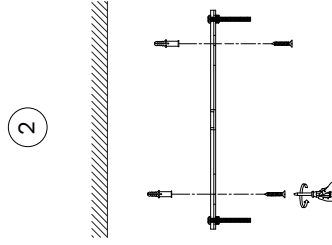


Mark, drill holes & apply plastic anchors with screws

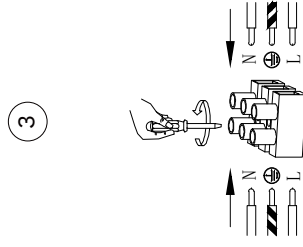

Connect the wires

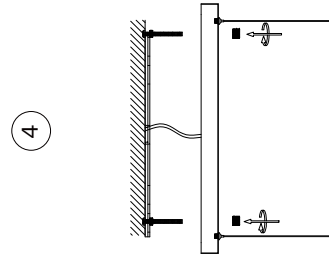

Apply the bottom caps

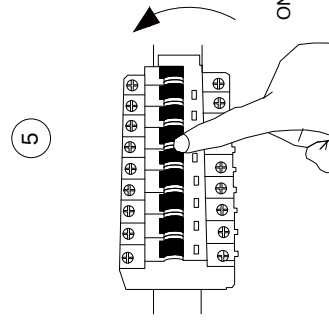

Turn on the general switch

