


# NOVA LUCE


9011335

1

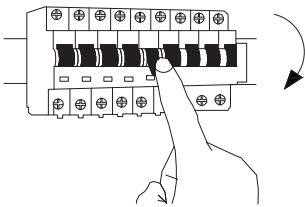


Turn off the general switch

2




Mark and drill holes

3

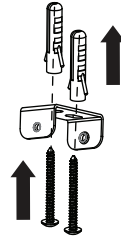


Apply plastic anchors  
& tie up screws

4

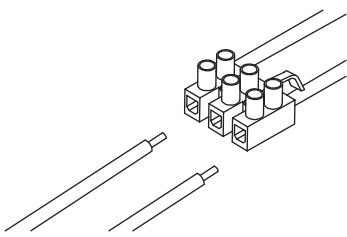


Connect the wires

5

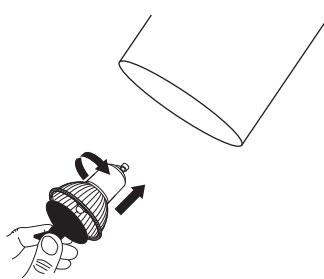


Apply the bulb by rotate

6

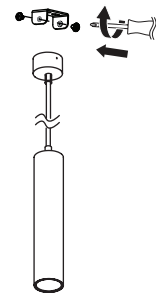

Fix it into place  
by tying up side screws

7

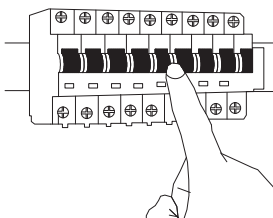

Turn on the general switch

