


NOVA LUCE


9236200

1

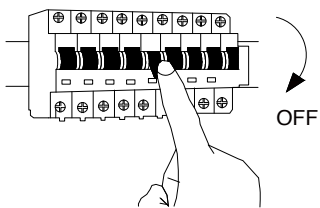


Turn off the general switch

2

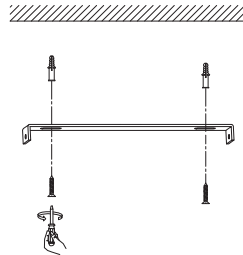


Drill holes & apply plastic anchors
With screws

3

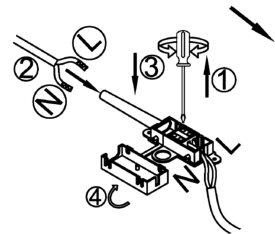


Connect the wires

4

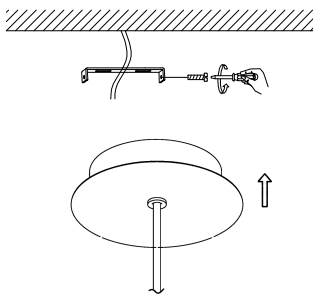


Apply the side screws

5

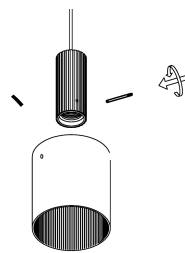

Apply the side screws
to make it stable

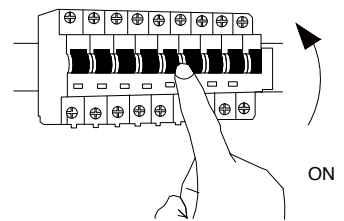

Turn on the general switch

