


NOVA LUCE

9232142

1

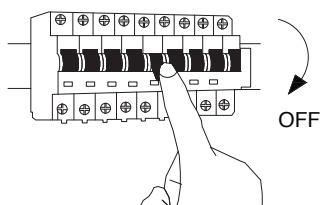

Turn off the general switch


2

Ø10mm



Drill hole 10mm

3




Apply plastic anchors
& Apply the screws

4




Connect the 3 wires

5

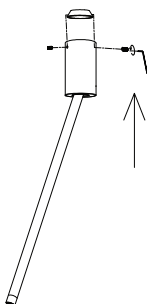

Connect with the base
& apply side screws

6

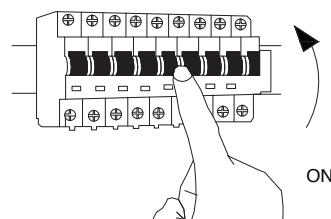

Turn on the general switch

