




1. Turn off the general switch

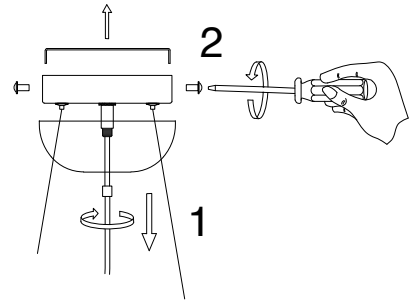


2. Untight the screws

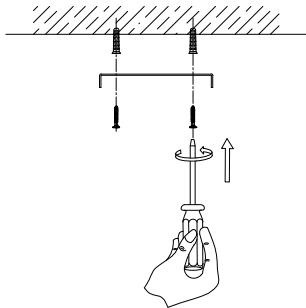


3. Drill holes & apply plastic anchors
With screws

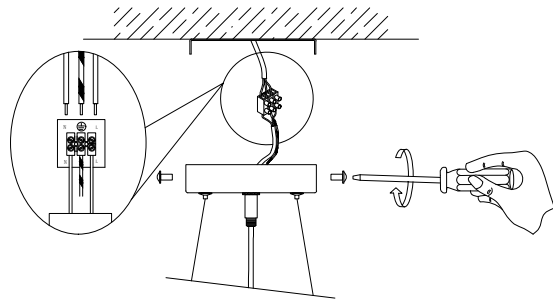

4. Connect the wires

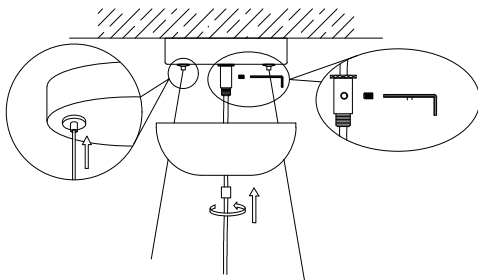

5. Tight the screws up
& Place the canopy in place

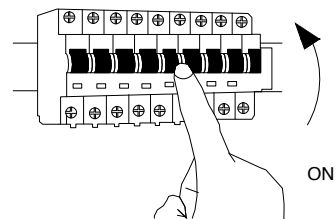

6. Turn on the general switch

