


# NOVA LUCE


9620161

1

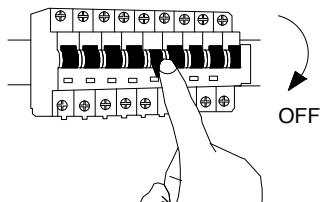


Turn off the general switch

2

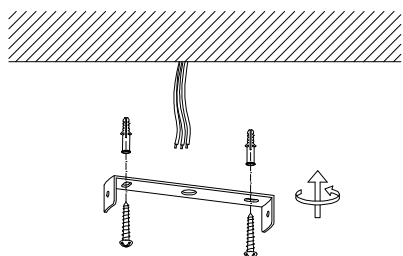


Drill holes  
& Apply plastic anchors with screws

3

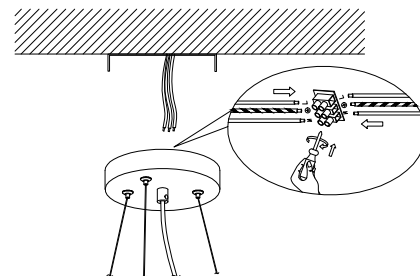


Connect the wires

4

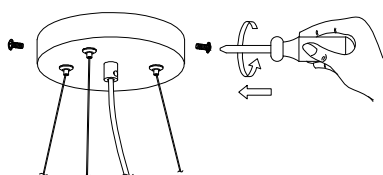


Apply the side screws

5

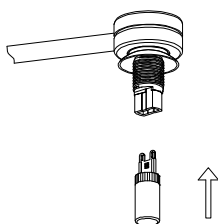


Apply the bulb

6

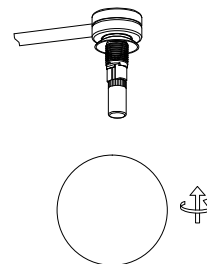

Apply the glasses into place  
By rotating

7

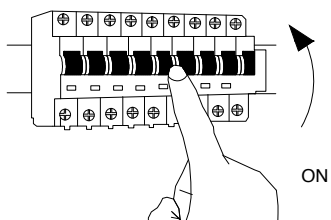

Turn on the general switch

