



NOVA LUCE


9333064

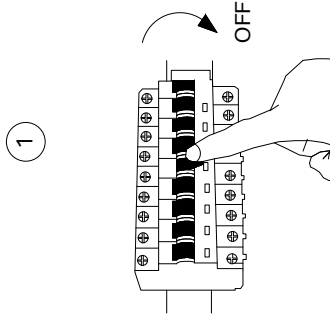


Turn off the general switch

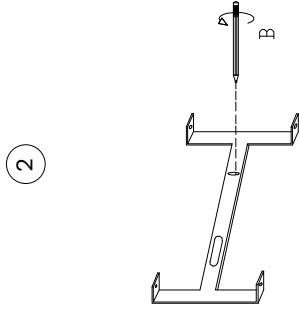


Drill holes & apply plastic anchors

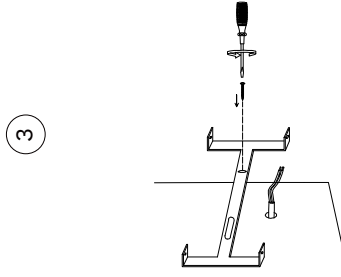


Apply the screws

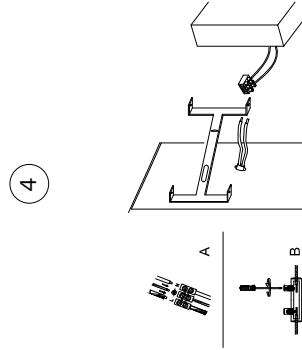

Connect the wires

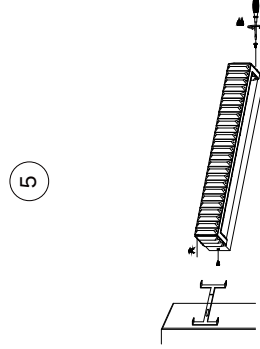

Apply the side screws

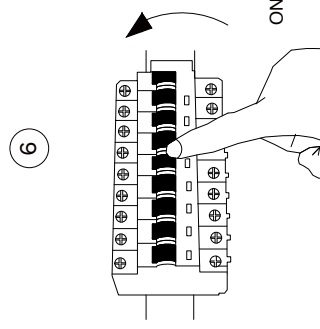

Turn on the general switch

