


NOVA LUCE


9019215 9019216

1

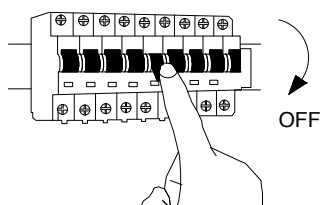


Turn off the general switch

2

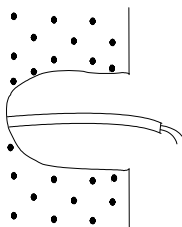


Dig a small hole at the outlet that is slightly larger than the product

3

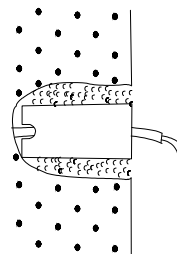


Pass the wire through & fill the empty areas with cement slurry

4

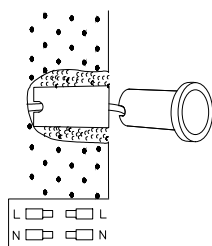

Connect the wires & insert the product in to place

5

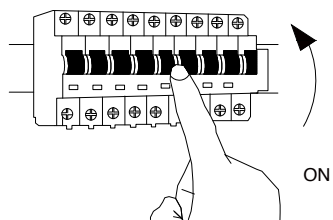

Turn on the general switch

