

# NOVA LUCE


9009141

1



Turn off the general switch

2

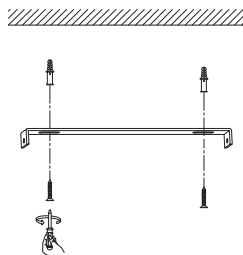


Drill holes & apply plastic anchors  
With screws

3



Connect the wires

4

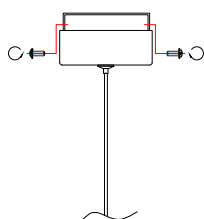


Apply the side screws

5



Apply the remaining part

6

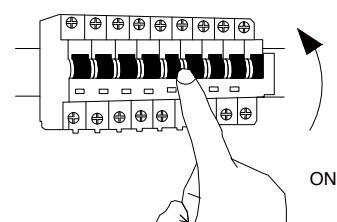

Turn on the general switch

