


# NOVA LUCE


9790551 9790552

1

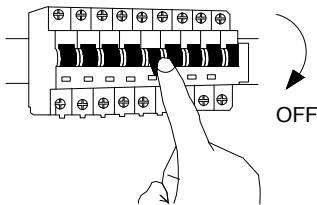


Turn off the general switch

2

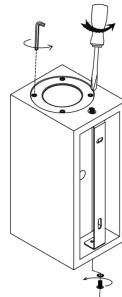


Untighten the side screws

3

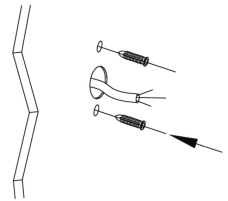


Drill holes & apply  
Plastic anchors

4

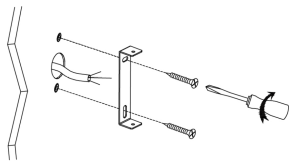


Apply the screws

5

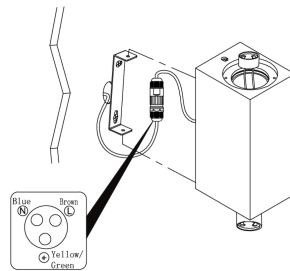


Connect the wires

6

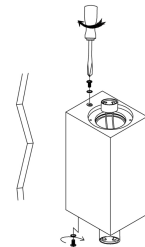


Apply the screws  
& Make it stable

7

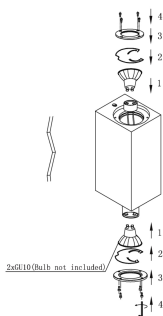

Apply the bulb  
With the screws

8

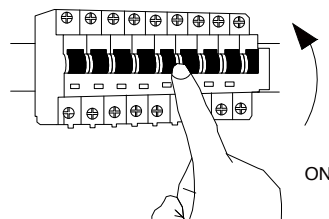

Turn on the general switch

