



# NOVA LUCE


9030520

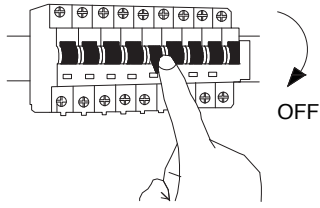


1. Turn off the general switch

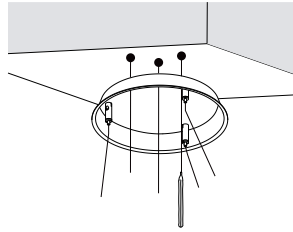


2. Align & mark

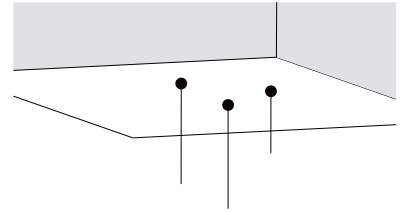


3. Drill holes on the marked areas

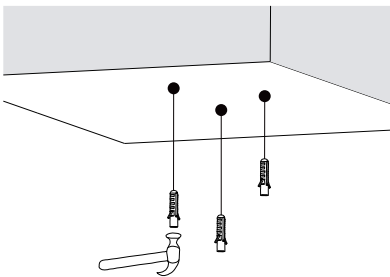


4. Apply plastic anchors

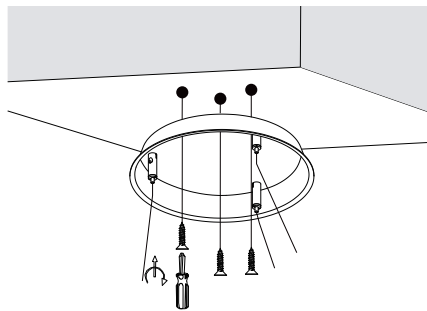


5. Apply the screws

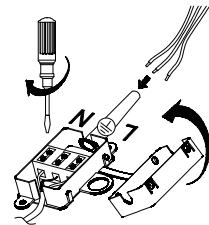


6. Connect the wires

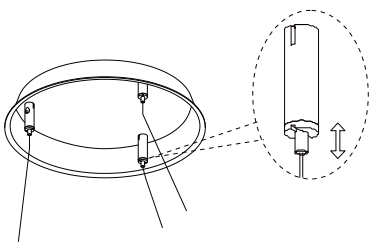

7. Put it in place

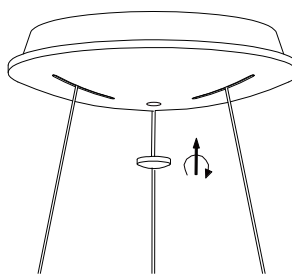

8. Apply the side screws

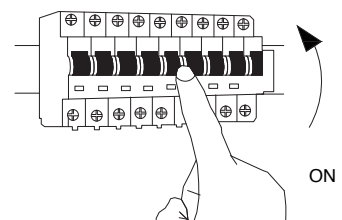

9. Turn on the general switch

