



# NOVA LUCE


9009292

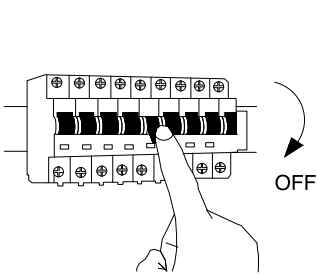


1. Turn off the general switch

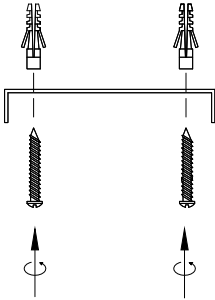


2. Drill holes apply plastic anchors with screws

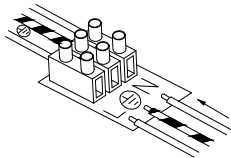


3. Connect the wires

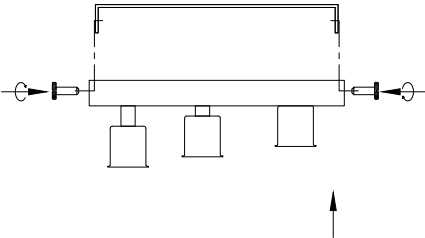

4. Apply side screws

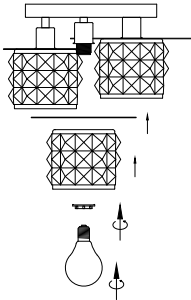

5. Insert the bulbs with the glass & cap

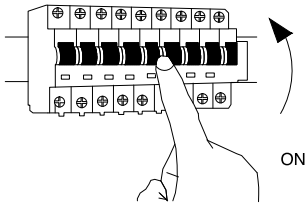

6. Turn on the general switch

