



# NOVA LUCE

787001, 9870020

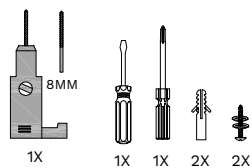


1

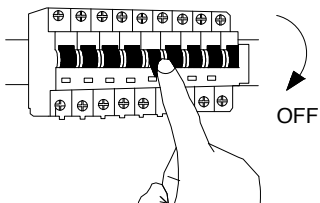


Turn off the general switch

2

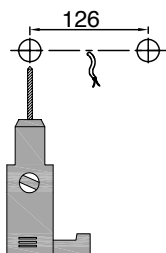


Align Mark & Drill holes

3

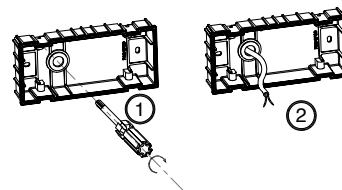


Make a hole with a screw  
& get the wire through

4

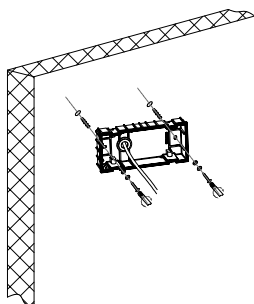


Drill holes & apply plastic anchors  
with screws

5

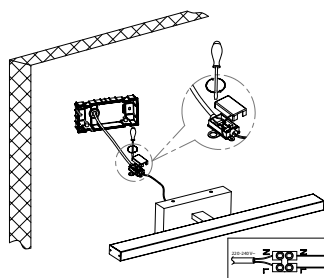


connect wires

6

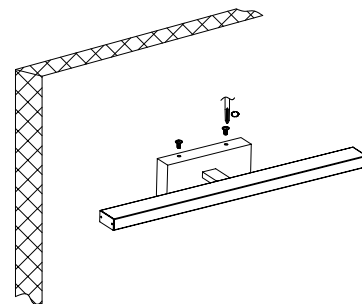

Apply side screws

7

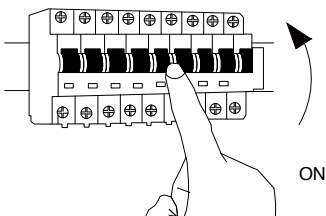

Turn on the general switch

