


# NOVA LUCE


9540237 9540238  
9540268 9540269

1

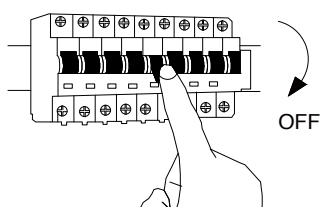


Turn off the general switch

2

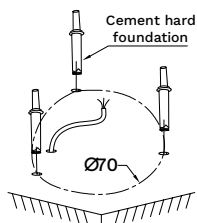


Drill holes & apply cement hard foundation

3

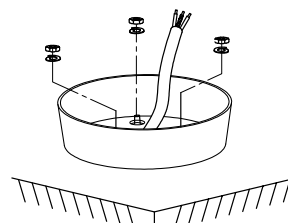


Apply the screw nuts

4

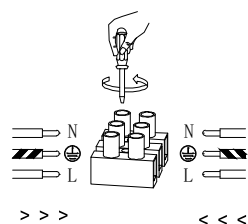


Connect the wires

5

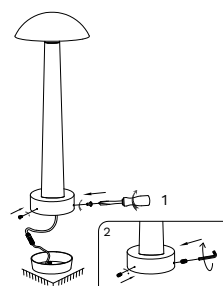

Apply the side screws

5

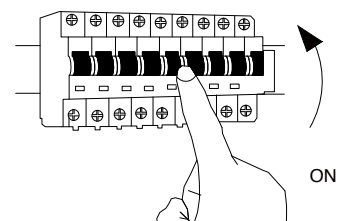

Turn on the general switch

