


# NOVA LUCE


9540239 9540240

1

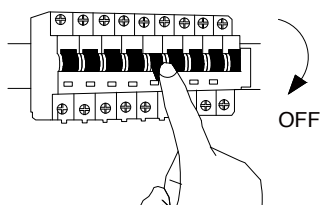


Turn off the general switch

2

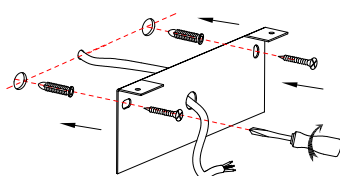


Drill holes & apply plastic anchors  
With screws

3

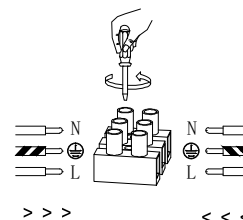


Connect the wires

4

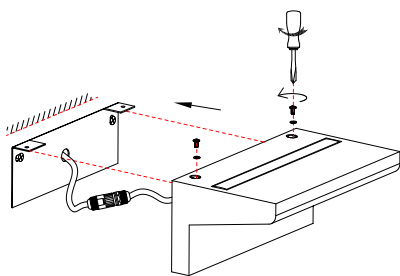

Apply the top screws

5

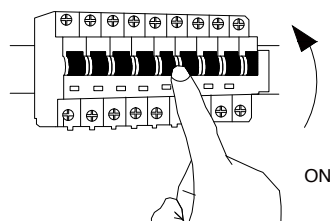

Turn on the general switch

