



NOVA LUCE


9333065

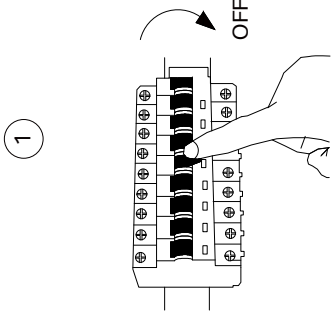


Turn off the general switch

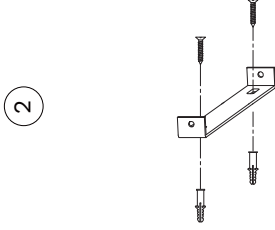


Drill holes & apply plastic anchors
With screws

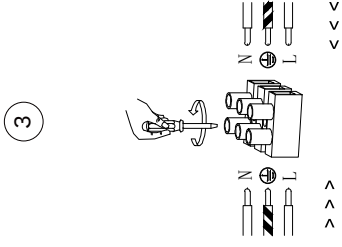

Connect the wires

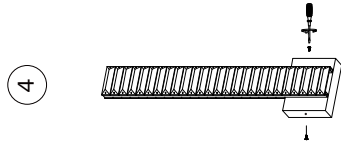

Apply the side screws

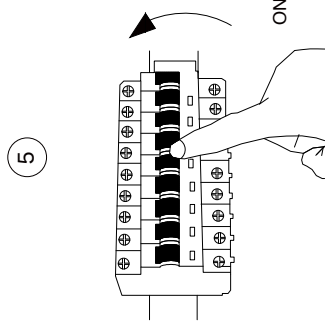

Turn on the general switch

