


NOVA LUCE


9232244, 9232245
9232246, 9232247

1

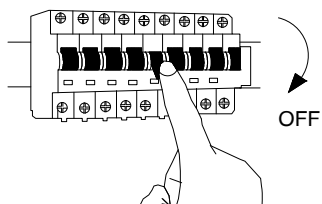


Turn off the general switch

2

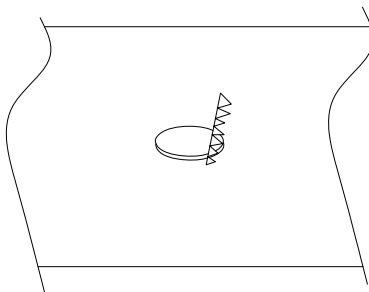


Create a 7.5 cm CutOut

3

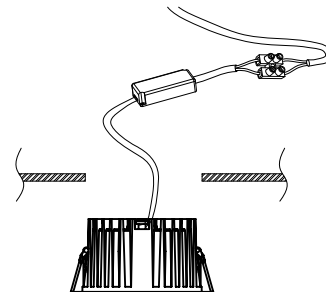


Connect the wires

4

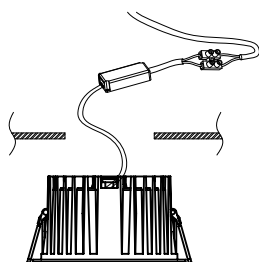

Place the luminaire into the hole

5

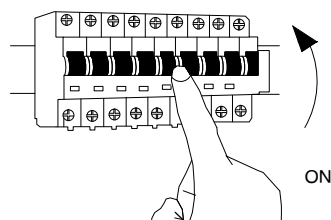

Turn on the general switch

