
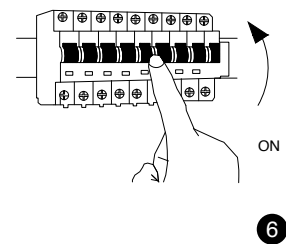
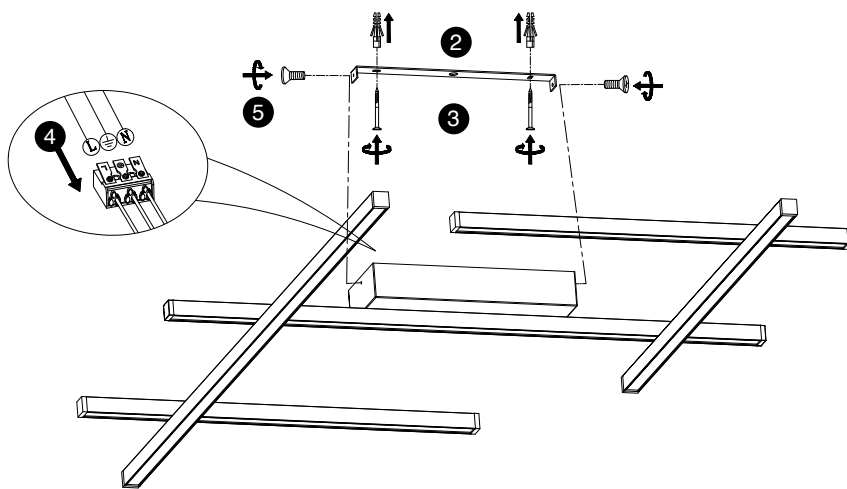


# NOVA LUCE

9002059

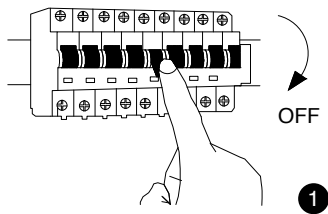

1. Turn off general switch
2. Drill holes & apply plastic anchors
3. Apply Screws
4. Connect the wires
5. Apply side screws
6. Turn on General switch