



NOVA LUCE


9088221, 9088222, 9088223, 9088222

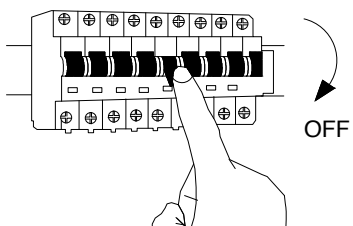


1. Turn off the general Switch

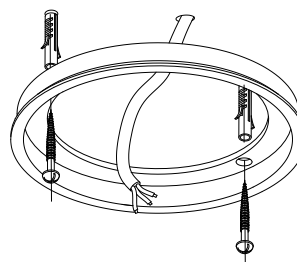


2. Align, mark and drill holes to apply the screws

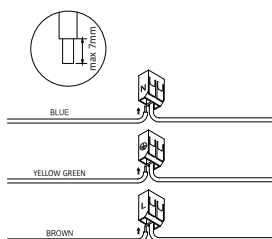

3. Connect the 3 wires

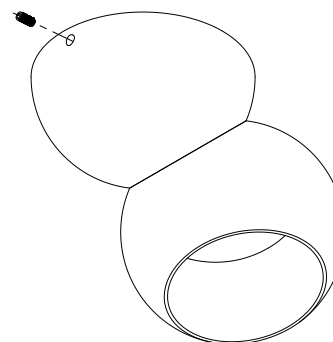

4. Apply the side screws

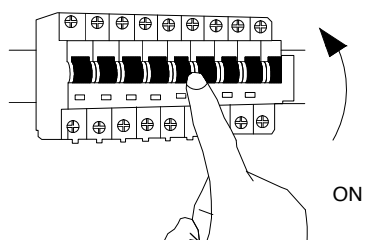

5. Turn on the general Switch

