

# NOVA LUCE


9214130 9214131  
9214142 9214143

1




Turn off the general switch

2

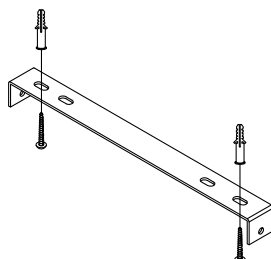


Drill holes & apply plastic anchors  
With screws

3

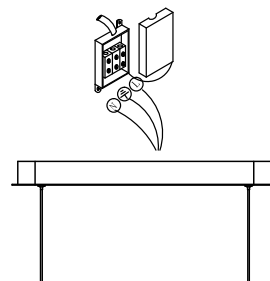


Connect the wires

4

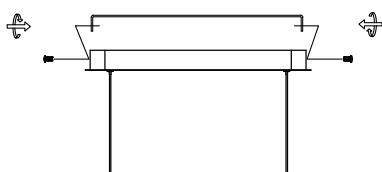

Apply the side screws

5

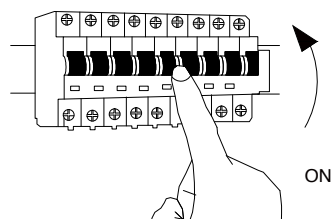

Turn on the general switch

