


# NOVA LUCE


9695192, 9695193

1

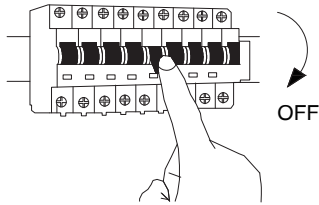


Turn off the general switch

2

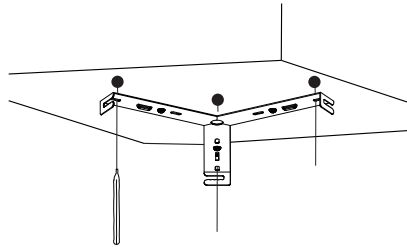


Mark holes

3

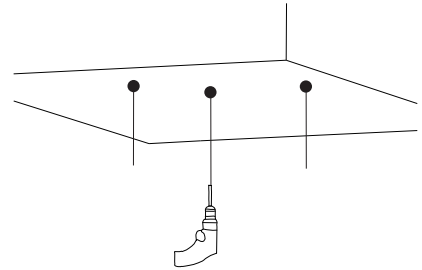


Drill holes

4

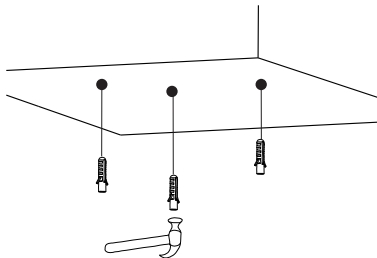


Apply plastic anchors

5

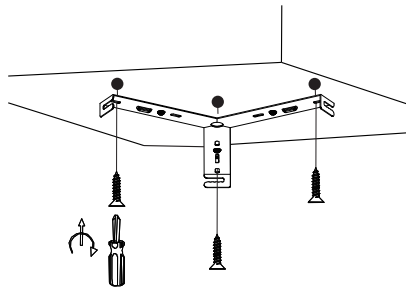


Tie up screws

6

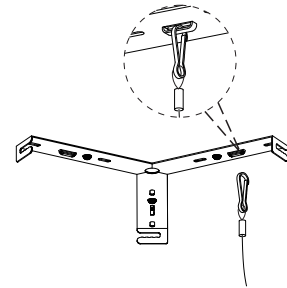


Connect assisting cords

7

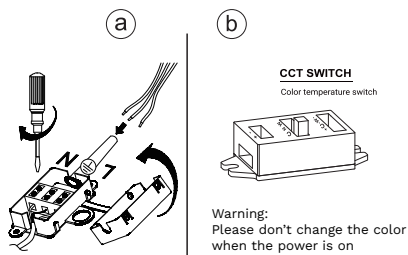


Connect the wires

8

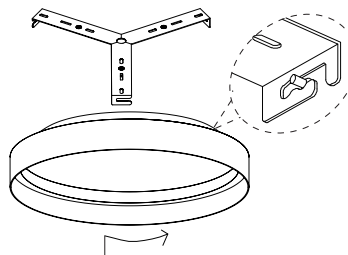

Apply it on place  
by clicking it into the openings

9

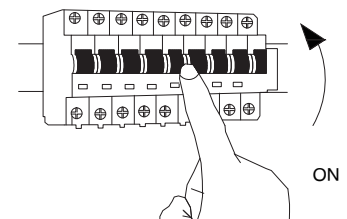

Turn on the general switch

