


# NOVA LUCE


9002870

1

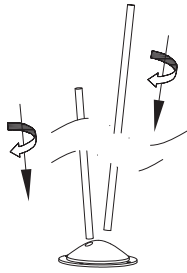


By rotating apply the pipes  
In to place

2

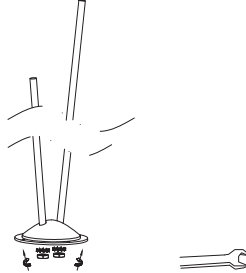


Apply the metal nuts by rotating

3




Assemble the product by rotating

4

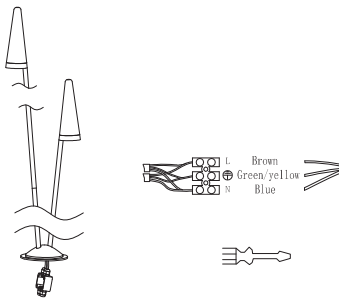


Connect the wires

5

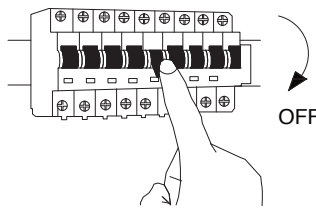


Turn off the general switch

6

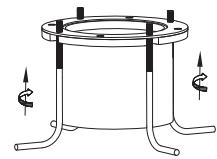


Apply the nuts by rotating

7

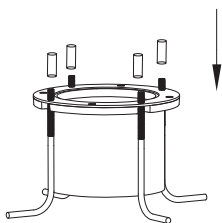


Apply the top nuts

8

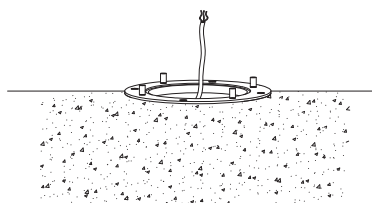

Get the wire in to the  
Correct possession

9

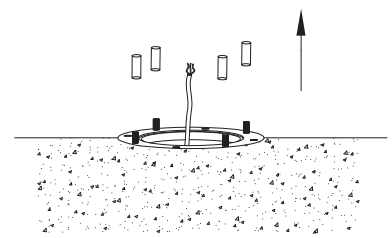


Remove the caps



# NOVA LUCE


9002870

10

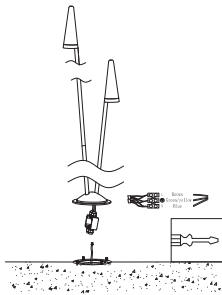


Connect the wires

11

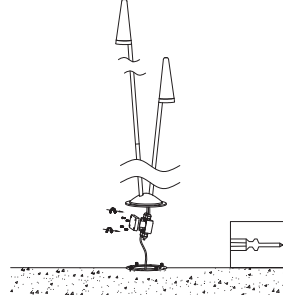


Apply screws for the cable box

12

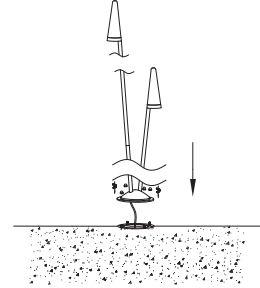

Apply the product in to place

13

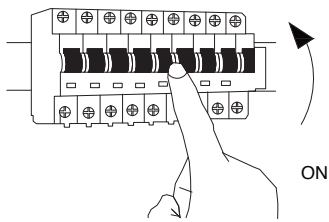

Turn on the general switch

