


# NOVA LUCE


9117304 9117306  
9117308 9117310

1

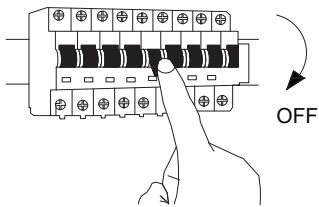


Turn off the general switch

2

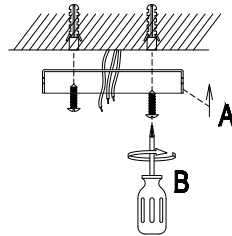


Drill holes & apply plastic anchors  
With screws

3

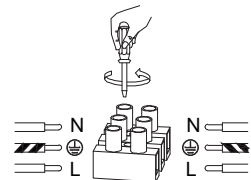


Connect the wires

4

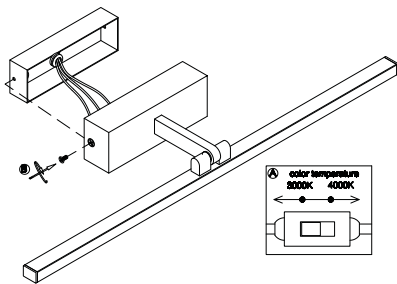

Apply the side screws

5

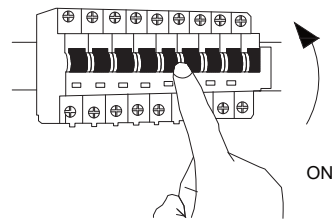

Turn on the general switch

