



# NOVA LUCE


9081260

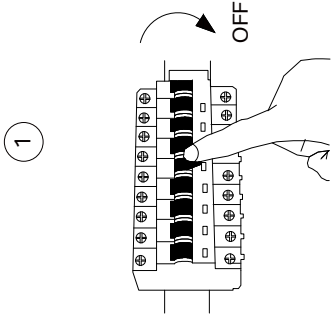


Turn off the general switch

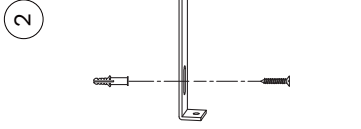


Drill holes & apply plastic anchors  
With screws

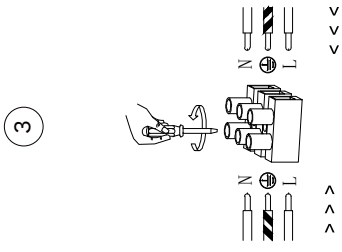

Connect the wires

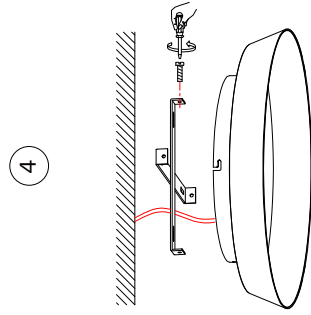

Apply the side screws

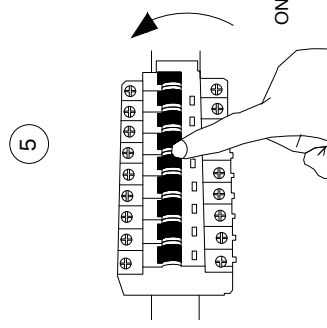

Turn on the general switch

