


# NOVA LUCE


8142680

1

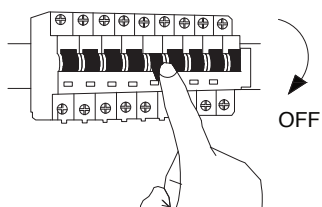


Turn off the general switch

2

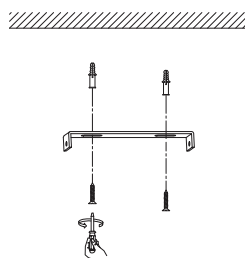


Drill holes Apply Plastic Anchors With Screws

3

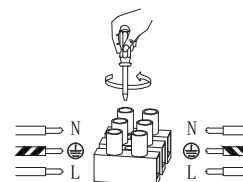


Connect The Wires

4

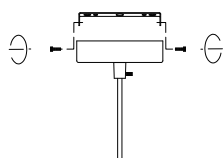

Apply the side screws

5

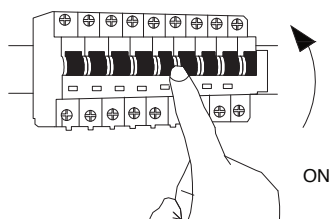

Turn on the general switch

