


# NOVA LUCE


9695226

1

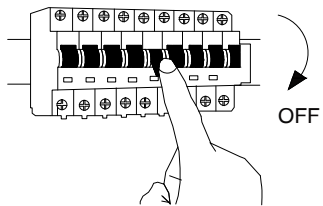


Turn off the general switch

2

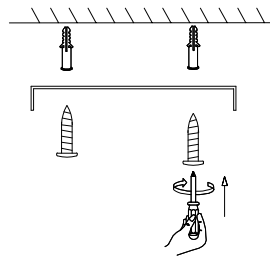


Mark where to drill holes  
Apply plastic anchors & tie up screws

3

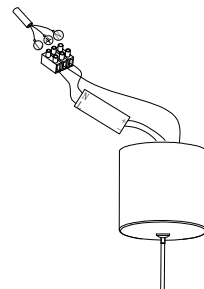


Connect wires

4

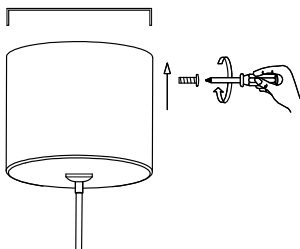

Fix it in place by tying up screws

5

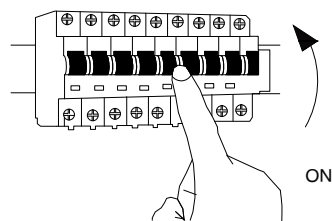

Turn on the general switch

6

