



# NOVA LUCE


9026125

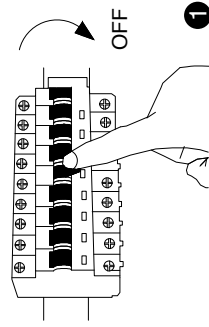

1

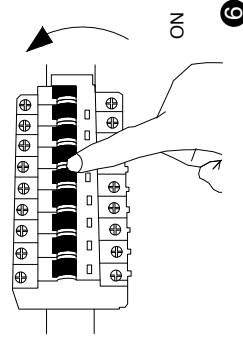

6

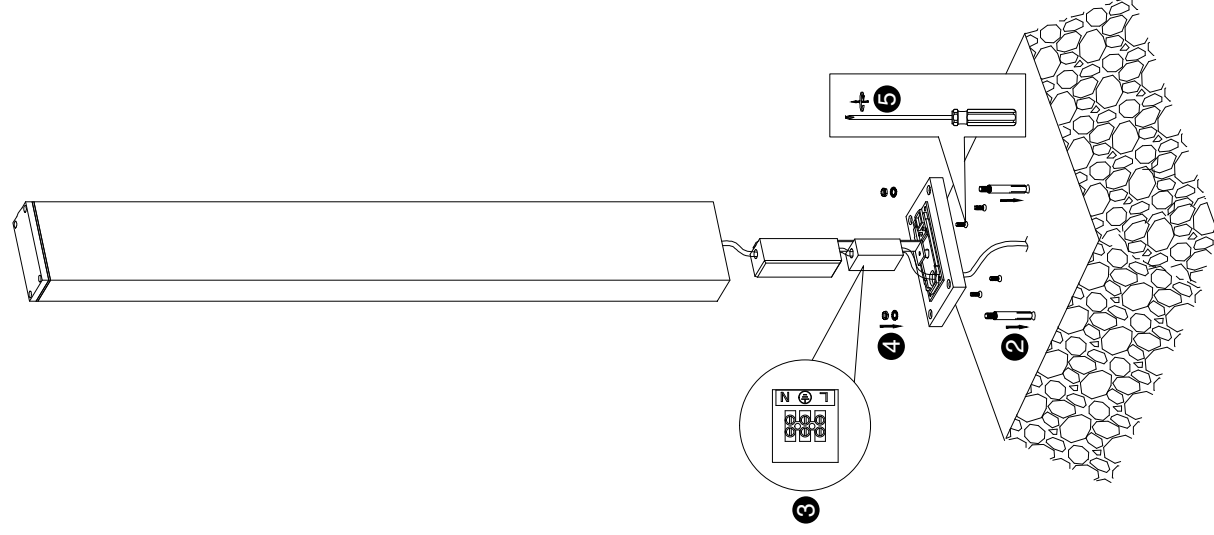

1. Turn off the general switch
2. Drill holes & apply anchors
3. Connect the wires

4. Apply nuts to make it stable
5. Apply screws in to place
6. Turn on the general switch