


# NOVA LUCE


9586800

1

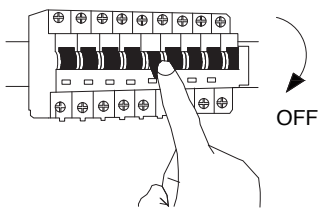


Turn off the general switch

2

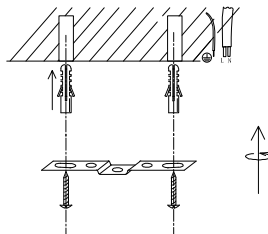


Drill holes & apply plastic anchors  
With screws

3

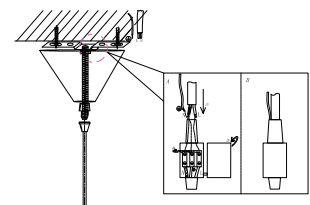


Connect the wires

4

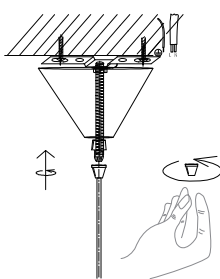


Apply the element in to place

5

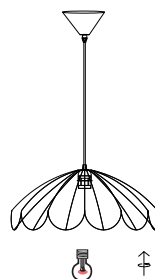

Apply the bulb in to place

6

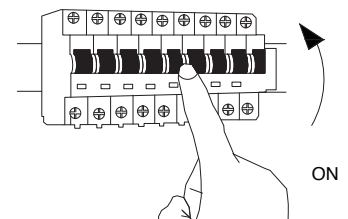

Turn on the general switch

