


# NOVA LUCE

9232138

1

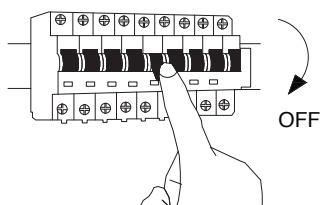

Turn off the general switch


2

Ø10mm



Drill hole 10mm

3




Apply plastic anchors  
& Apply the screws

4




Connect the 3 wires

5

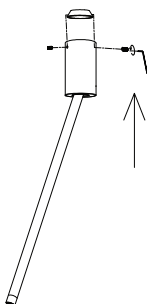

Connect with the base  
& apply side screws

6

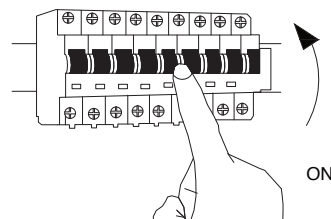

Turn on the general switch

