


NOVA LUCE


9035960

1

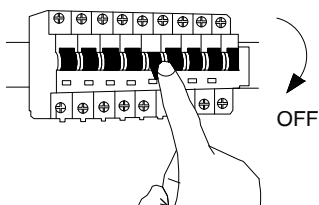


Turn off the general switch

2

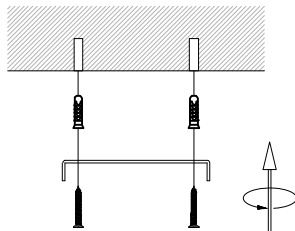


Mark where to drill holes
Apply plastic anchors & tie up screws

3

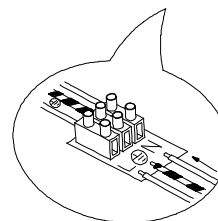


Connect wires

4

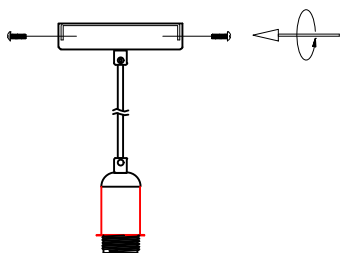


Tie up side screws

5

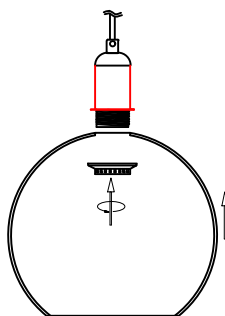


Connect parts by rotate

6

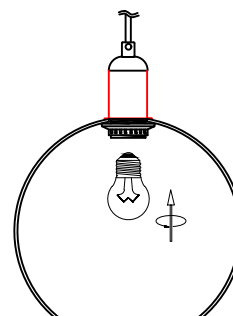

Insert bulb by rotate

7

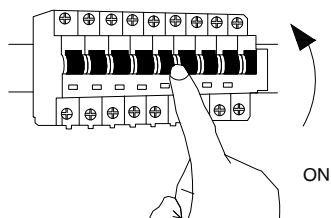

Turn on the general switch

