



NOVA LUCE

9361083/ 9361084

①

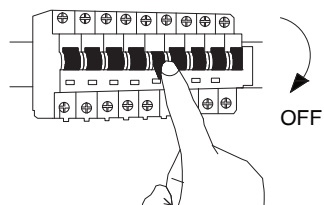


Turn off the general switch

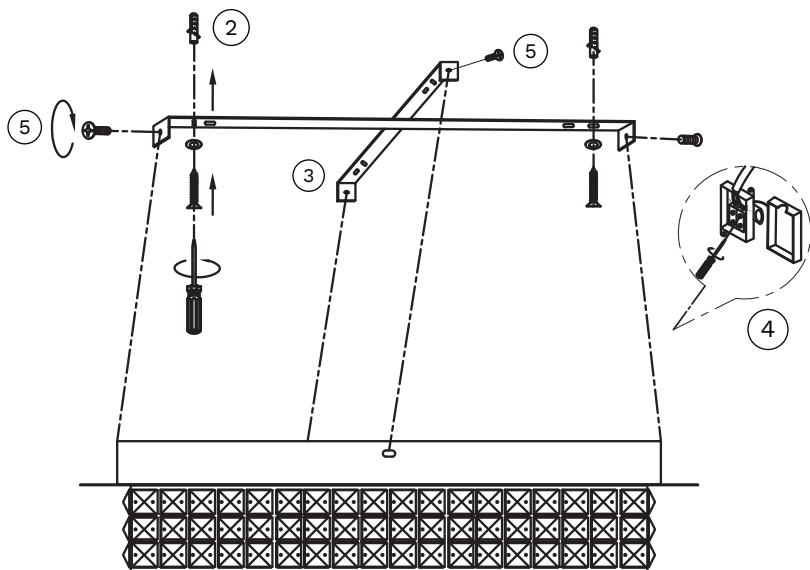

2. Drill holes & apply plastic anchors
3. Tie up screws
4. Connect the wires
5. Apply side screws by tying them up

⑥

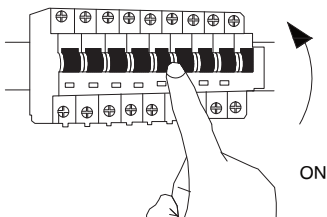

Turn on the general switch

