



NOVA LUCE

9088212

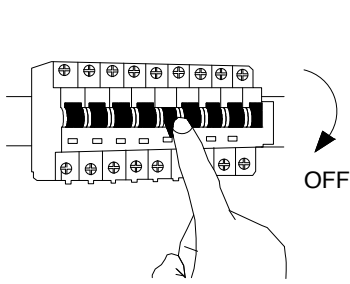


1. Turn off the general Switch

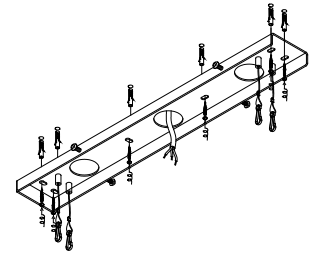


2. Align, mark and drill holes to apply the screws



3. Connect subordinate ropes for installing the wires

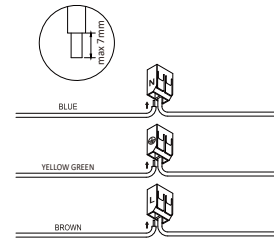


4. Connect the 3 wires

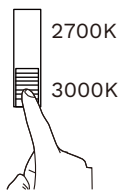


ATTENTION!
Turn off the light
before changing the
color temperature


5. changing the color temperature

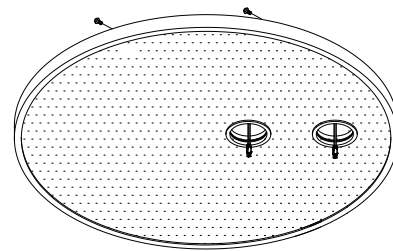

6. Apply the side screws

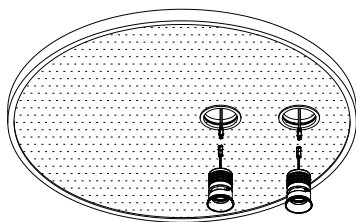

7. insert the spotlight &
Plug wires in, by clicking them

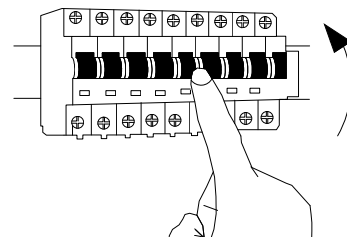

8. Turn on the general Switch