


NOVA LUCE

9030851

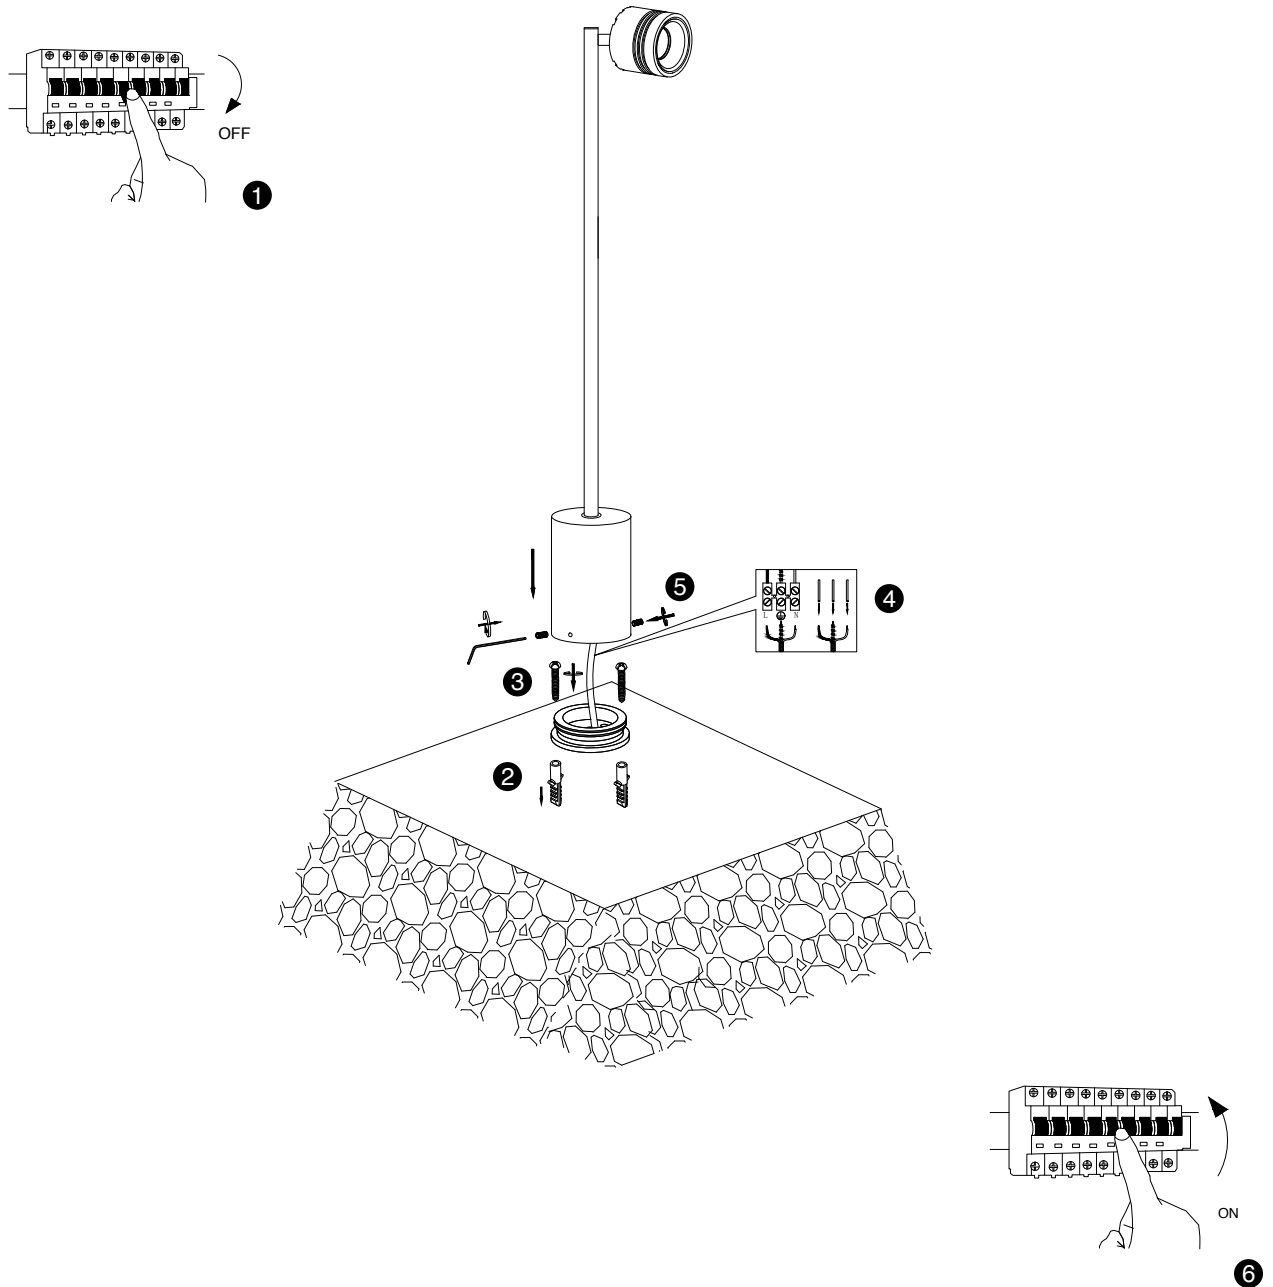

1. Turn off the general switch
2. Drill holes & apply plastic anchors
3. Apply screws
4. Connect the wires
5. Apply side screws
6. Turn off the general switch