


# NOVA LUCE


9790021

①

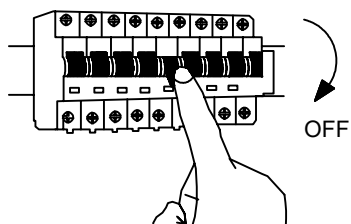


Turn off thr general switch

②

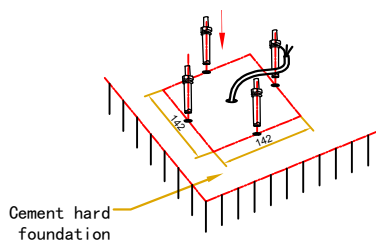


Drill holes & apply  
The elements in place

③

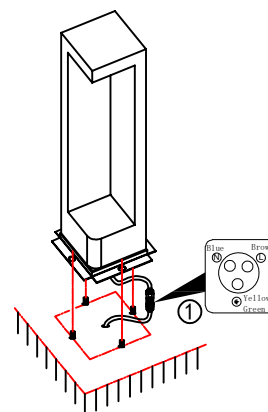


Connect the wires

④

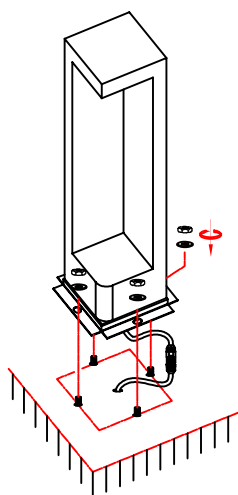

Apply the nuts & tighten it

⑤

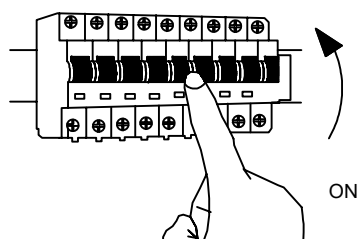

Turn on thr general switch

⑥

