


NOVA LUCE


9453041 9453042

1

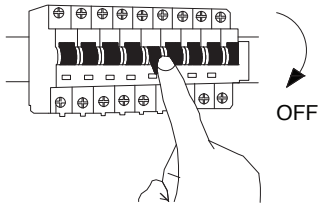


Turn off the general switch

2

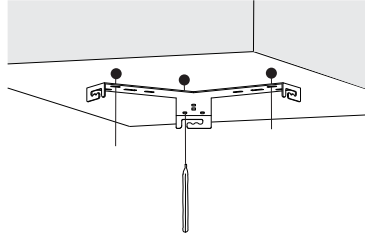


Mark where to drill holes

3

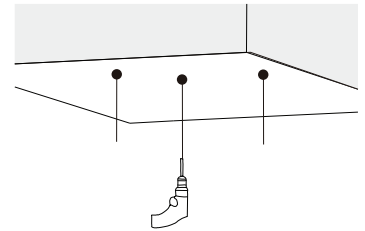


Drill on the marked areas

4

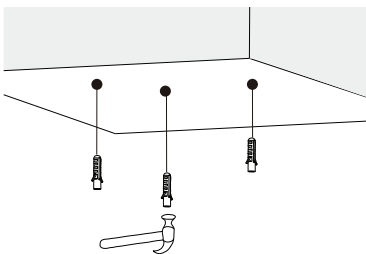


Apply plastic anchors

5

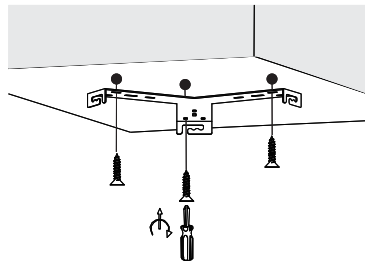


Apply screws

6

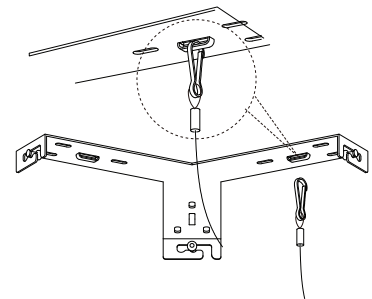


Make it stable

7

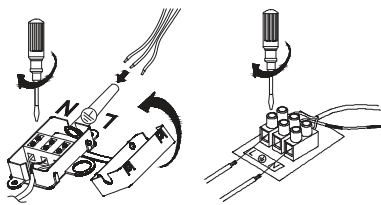


Connect the wires

8

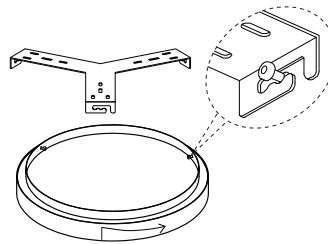

Adjust the wire & fix it into place

9

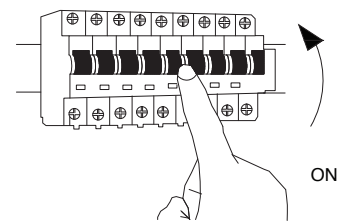

Turn on the general switch

