


# NOVA LUCE


832403

1

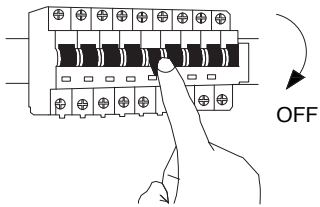


Turn off the general switch

2

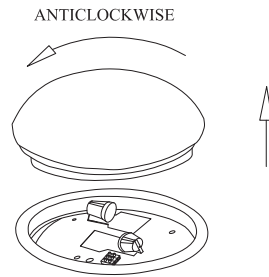


Anticlockwise to open

3

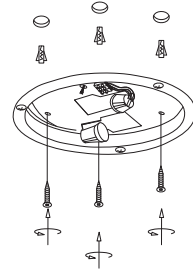


Drill holes apply plastic anchors  
With screws

4

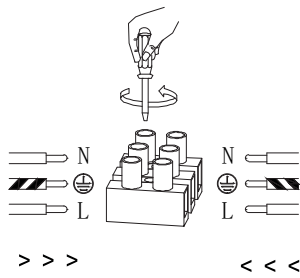


Connect wires

5

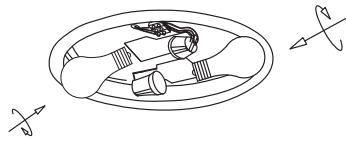


Apply bulbs

6

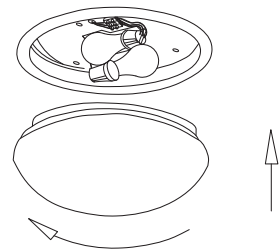

Rotate clockwise to  
Fix it in place

7

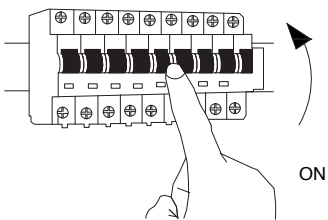

Turn on the general switch

