

# NOVA LUCE


9009147

1



Turn off the general switch

2

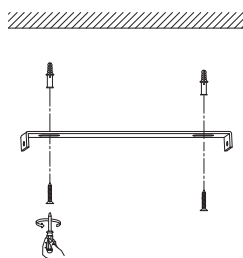


Drill holes & apply plastic anchors  
With screws

3




Connect the wires

4

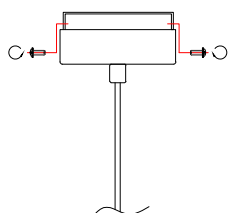


Apply the side screws

5

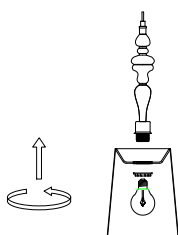

Apply the remaining part  
By rotating

6

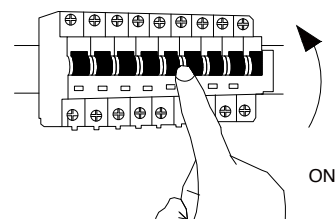

Turn on the general switch

