


NOVA LUCE


9117080
9117082/ 9117084/ 9117086

1

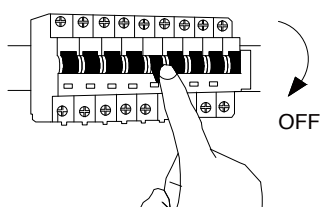


Turn off the general switch

2

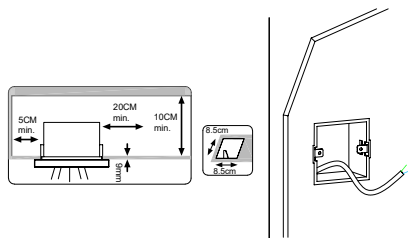


Make a cut out

3

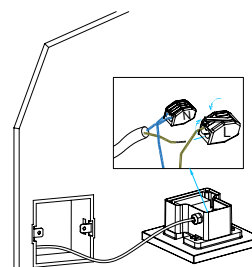


Connect the wires

4

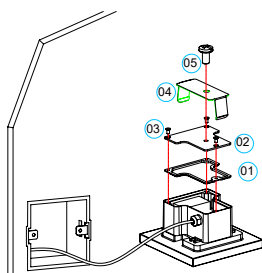


Apply the elements in place

5

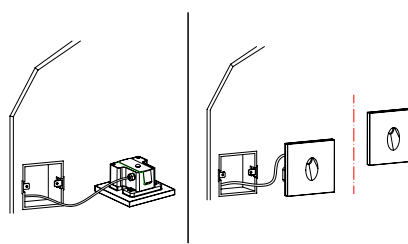


Put it in place


6

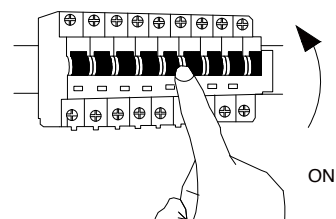


Turn on the general switch

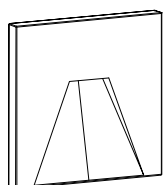

9117080

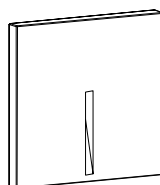

9117084

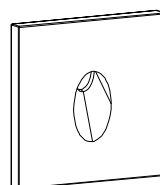

9117086

