


# NOVA LUCE


9104713 9104714

1

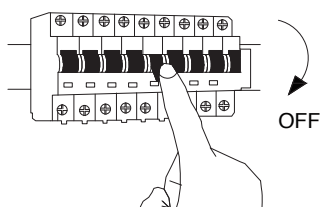


Turn off the general switch

2

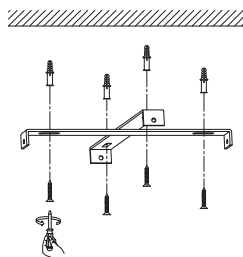

Drill holes & apply plastic anchors  
With screws


3

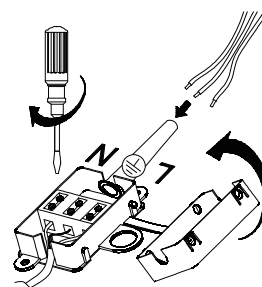

Connect the wires

4


**CCT SWITCH**  
Color temperature switch



Warning:  
Please not to change  
color when power on.


control the CCT switch when off

5

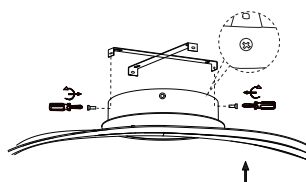

Apply the side screws

6

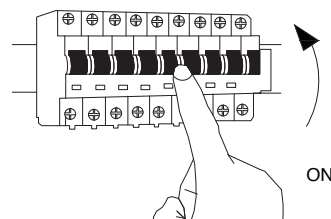

Turn on the general switch

