


# NOVA LUCE


720401, 720402

1

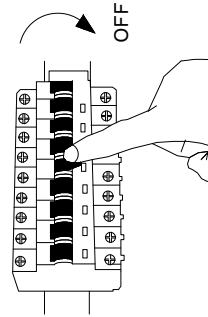


Turn off the general switch

2

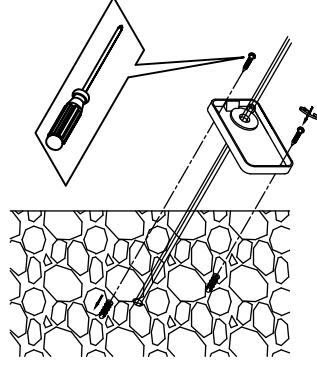


Mark, drill holes,  
apply plastic anchors  
& tie up screws

3

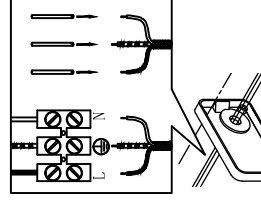


Connect wires

4

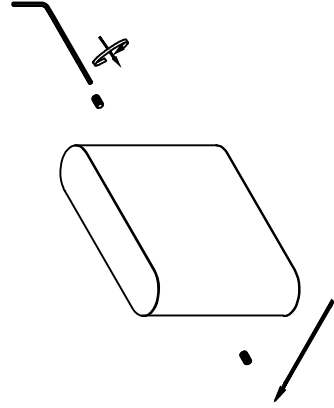

Apply the cap into place  
by tying up the side screws

5

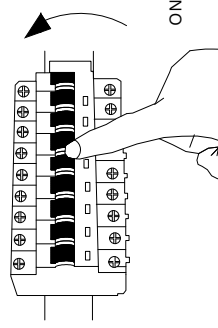

Turn on the general switch

6

