

# NOVA LUCE


9214174

1




Turn off the general switch

2

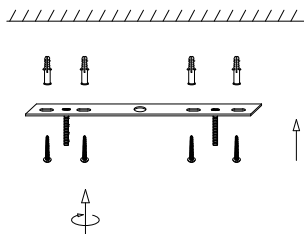


Drill holes & apply plastic anchors  
With screws

3

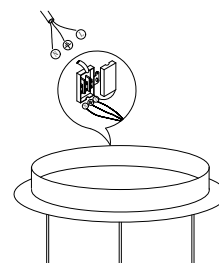


Connect the wires

4

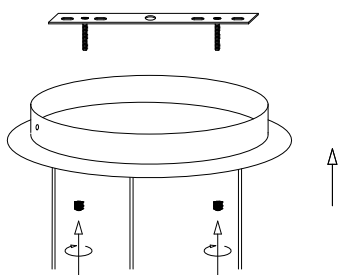


Apply the bottom nuts

5

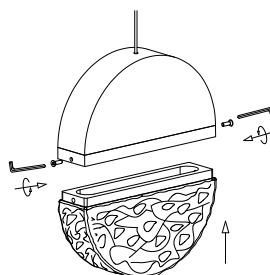

Apply the side screws

6

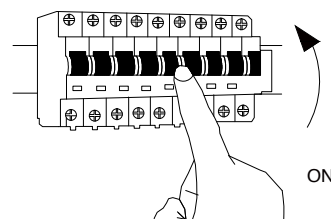

Turn on the general switch

