


NOVA LUCE


9248171

1

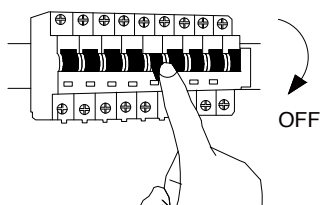


Turn off the general switch

2

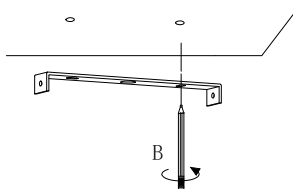


Mark where to drill

3

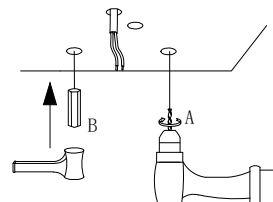


Drill holes & apply
Plastic anchors

4

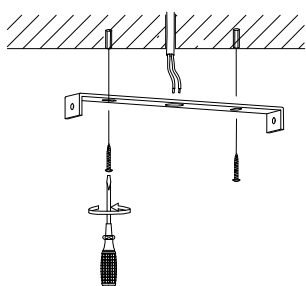


Apply screws

5

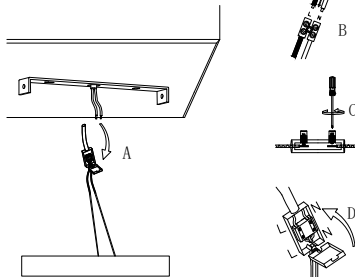


Connect the wires

6

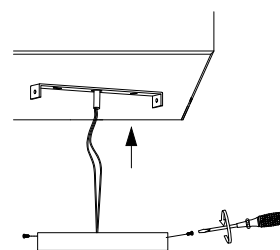

Apply the side screws

7

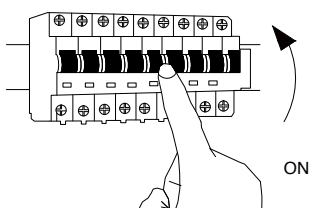

Turn on the general switch

