


NOVA LUCE


9879391

1

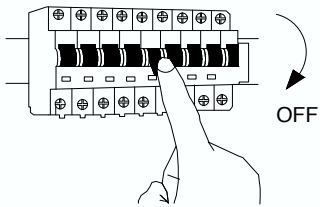


Turn off the general switch

2

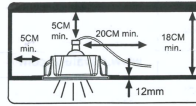


Spacing map

3

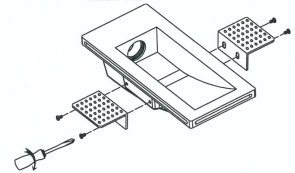


Untight the side screws

4

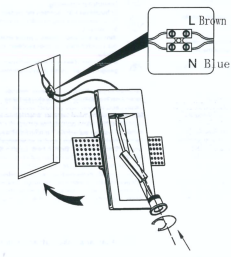


Connect the wires

5

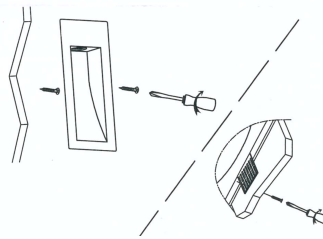


Apply the side screws

6

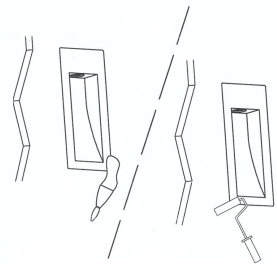

Apply putty powder as cover

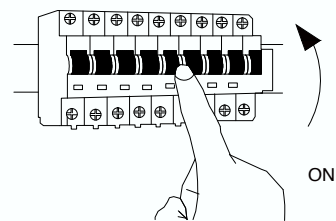

Turn on the general switch

