



# NOVA LUCE


9345526, 9345527  
9345528, 9345529

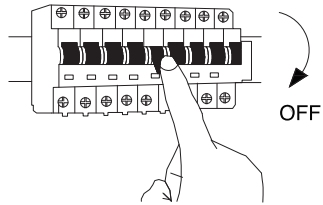


1. Turn off the general switch

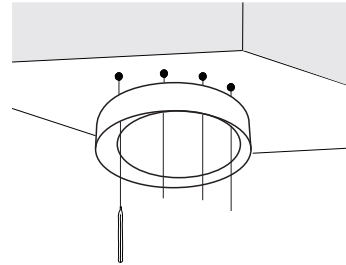


2. Mark where to drill holes

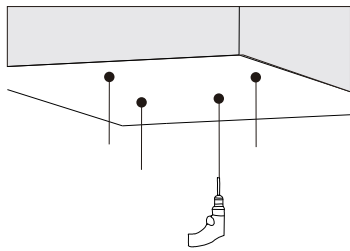


3. Drill on the marked areas

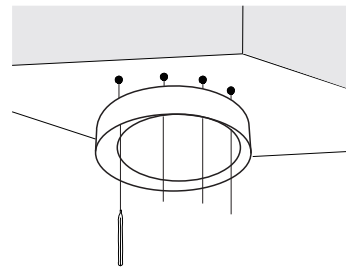


4. Apply plastic anchors & screws

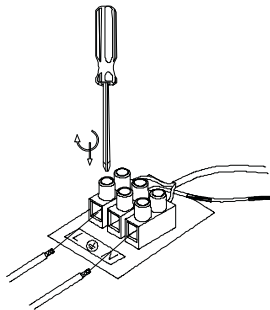


5. Connect the wires

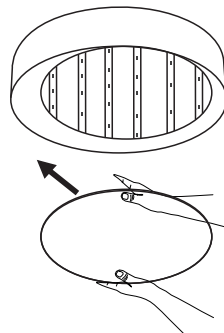

Install from here firstly  
6. Put the product in place

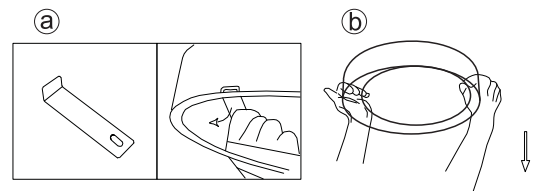

7. With the extra tool adjust the product

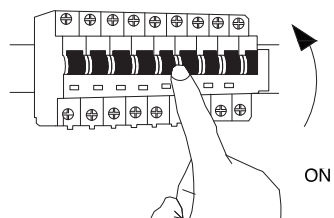

8. Turn on the general switch

